



OPĆA UPUTSTVA ZA PROJEKTIRANJE I MONTAŽU INFRA GRIJALICA

PRAVILA ZA RAZMJESTAJ PLINSKIH INFRA GRIJALICA


POPREČNI RASPORED

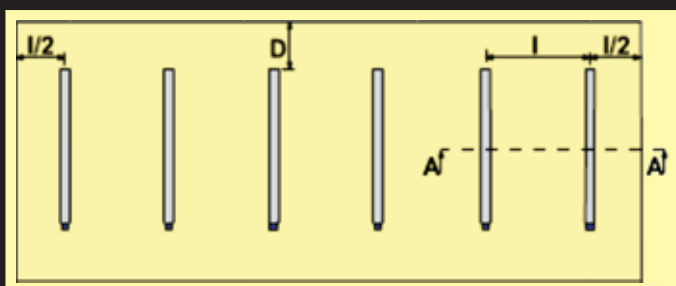


UZDUŽNI RASPORED

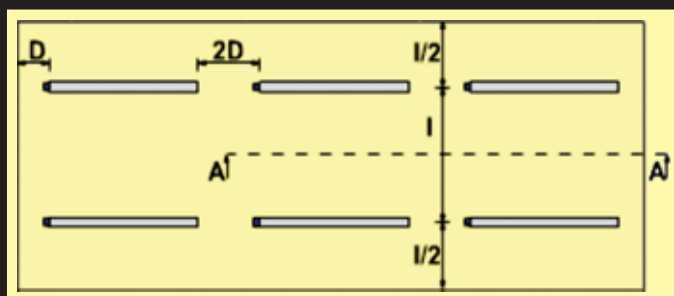

POPREČNI PRESJEK A - A

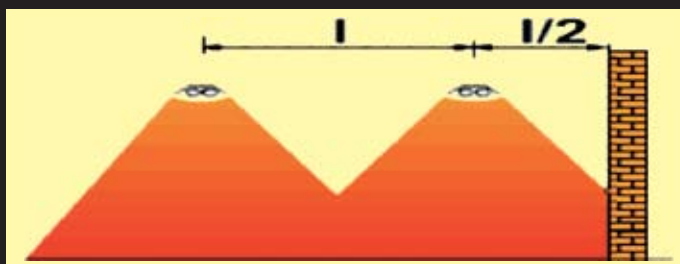

POPREČNI PRESJEK A - A

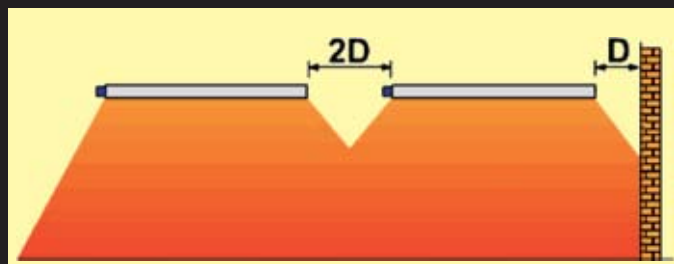

OSNOVNA FORMULA ZA IZRAČUN SNAGE I RAZMJESTAJ PLINSKIH INFRA GRIJALICA

H
visina instalacije
L
udaljenost od sredina (m)
D
udaljenost (m)



INFRA IG 28									
H	4	5	6						
L max	5	6.5	8						
D max	2.5	3	3.5						
INFRA IG 38									
H	5	6	7	8	9	10	11	12	
L max	6	8	9	10	10	10	10	10	
D max	3	3.5	4	4.5	4.5	4.5	4.5	4.5	
INFRA IG 45									
H	5	6	7	8	9	10	11	12	
L max	6	8	9	10	10	10	10	10	
D max	3	3.5	4	4.5	4.5	4.5	4.5	4.5	
Odnos instalirane snage (W) na površinu podloge koju zagrijavamo (m2)									
H	4	5	6	7	8	9	10	11	Vanj. Temp.
W/mq	190	190	210	210	230	230	250	250	-5°C
W/mq	190	200	220	220	240	240	260	270	-10°C
W/mq	190	210	230	230	250	250	270	280	-20°C